







## Entering a Security Code and/or Smart Key

### Security Code Configuration

The *empower* system can be configured with up to 32 different user-codes. The system must be configured with at least one Master Code that can be used to Arm and Disarm the security *and* gain access to User Programming. The other 31 user-codes may be a mix of additional Master Codes and/or user-codes that are strictly for security Arming and Disarming. In order to add and delete codes, you must have an authorized Master Code. To enter, edit or delete a code, the user must enter User Programming.

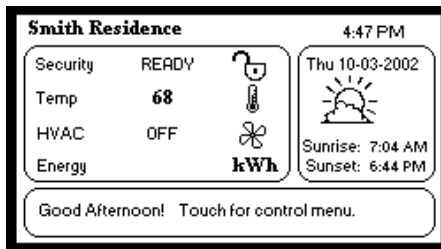

To enter the User Programming Menu, you must enter an authorized Master Code. At the User Programming Menu, select the Setup Icon to move into the Setup Menu. In the Setup Menu, select the icon labeled 'Safety'.

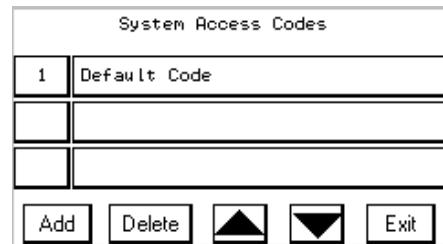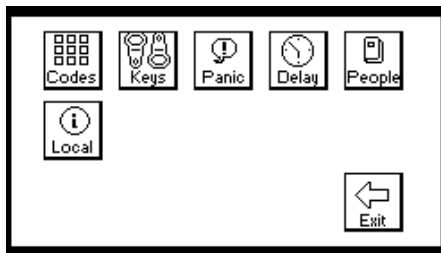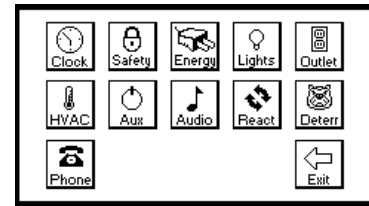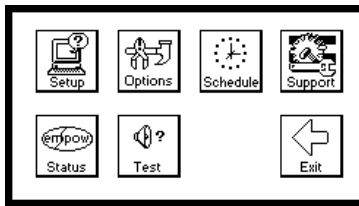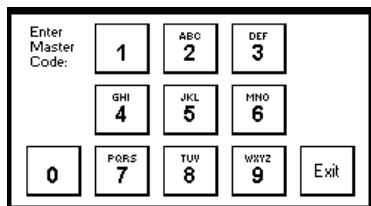

Every system comes from the factory with one default Master Code (12345). It is recommended that this be changed as soon as possible. There should always be at least one code with Master Access in the system.

System Access Codes	
1	Default Code

Code #1	
<input checked="" type="checkbox"/> Security Access	<input type="checkbox"/> Master Access
<input type="checkbox"/> Easy Exit	<input type="checkbox"/> Hostage

Code #1	
Q W E R T Y U I O P ←	
← A S D F G H J K L ←	
123 Z X C V B N M ' CLR	
Shift Space _ !	

1	ABC 2	DEF 3		
GHI 4	JKL 5	MNO 6		
0	PQRS 7	TUV 8	WXYZ 9	Exit

### *Adding a Code*

1. Select the Add Icon from the System Access Code List.
2. Select the 'Privileges' to assign the authorized access to the system.
  - a. Master Access: Arms/Disarms Security and allows access to User Programming and phone features.
  - b. Security Access: Arms/Disarms Security only.
  - c. Easy Exit: Arms system only.
  - d. Hostage: Disarms security system but sends out a silent "Duress" alarm to Monitoring (Only if system has been set up for monitoring).
3. Select 'Name' to name the Code (Up to 20 characters).
4. Select 'Code' to bring up the numeric keypad for entering a code. (Must be 5 digits).

### *Deleting a Code*


1. Select the "Delete" Icon.
2. Then select the code you wish to delete.
3. The code is now deleted.

### *Edit an Existing Code*






Press the existing code you wish to edit and the attributes of this code will come up.

## Smart Key Configuration

The *empower* system can be configured with up to 32 different Smart Keys. In order to add and delete Smart Keys, you must have an authorized Master Code. To enter, edit or delete a Smart Key, the user must enter User Programming.

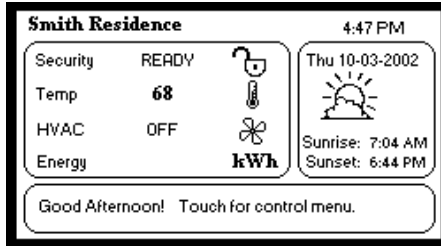


To enter the User Programming Menu, you must enter an authorized Master Code. At the User Programming Menu, select the Setup Icon to move into the Setup Menu. In the Setup Menu, select the icon labeled 'Safety'.

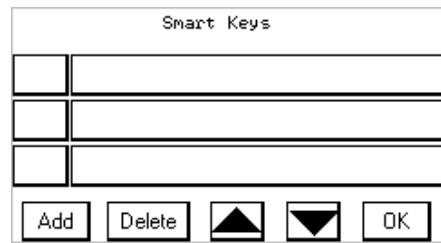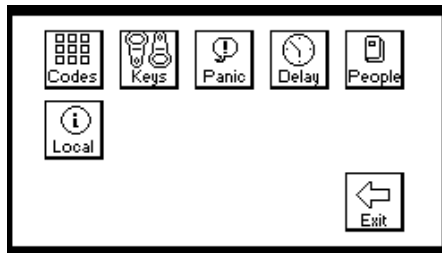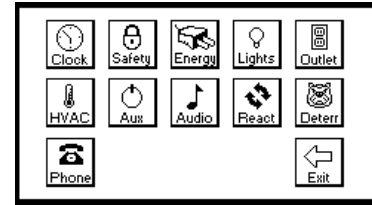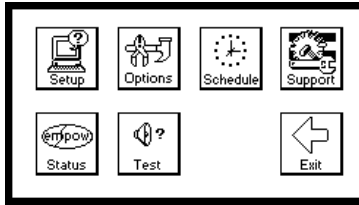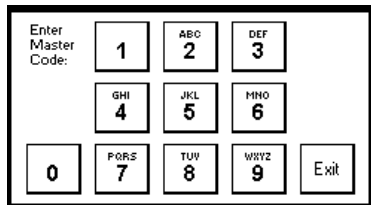

To add or delete a Smart Key, please continue on the following page.

### Adding a Smart Key

After selecting 'Keys' from the Setup Menu, select the 'Add' Icon to add a Smart Key.

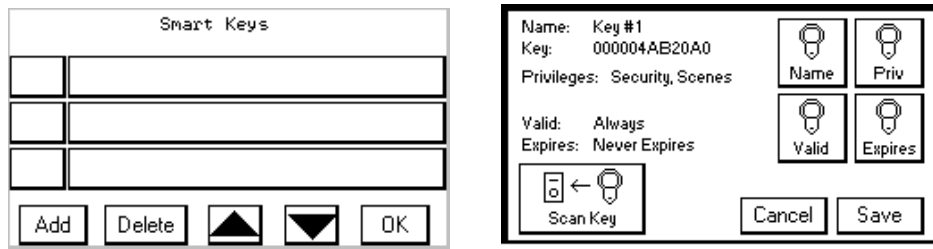

1. Name: Select the 'Name' Icon to assign a person's name to that Smart Key: (Up to 20 characters). Selecting 'Name' will take the user to the Alphanumeric Keypad to enter the name.
2. Valid: Allows you to set when the Key is valid for use. Whatever is selected for the "Valid" field is the only time that Key will work on the system. For example, a "Smart Key" set to be valid for "Weekdays" will only work on a weekday. Choices are: Always, Any individual day of the week (Mondays, Tuesdays, etc.), Weekdays, Weekends, Days, Nights.
3. Expires: Allows you to give this Key an expiration date. 'Never Expires' is the default. Selecting Expires will take the user to the Date Configuration Screen.
4. Scan: Press the 'Scan' Icon and the word "Reading" should appear in the upper right-hand corner of the screen. At this time, you can take a "Smart Key" to any Key Reader connected to the system and place the metallic portion of the key into the silver ring on the Key Reader. Hold the Key there until you hear the confirmation beep (Several short beeps).
5. Privileges: Allows you to set the Key up for use with Security or Scenes, or both. **Privileges must be selected before a Smart Key is active.**

\*Note: A "Smart Key" can only be programmed in once. If a Key is already programmed into the system, an error message will occur at the Touchscreen.

### Deleting a Smart Key

1. At the Smart Key List Menu, press the 'Delete' Icon and select a Key to be deleted.
2. The selected Key is now deleted.